

1. CITP CAEX Layer Specification

1.1 History

<i>Date</i>	<i>Version</i>	<i>Brief info</i>
2013-06-15	PA1	First prerelease of A draft 1, featuring Live View and Cue Recording messages.
2013-07-13	PA2	Added reply message clarification to the GetLiveViewImage message.
2013-08-03	PA3	Removed trailing copy & paste remark for the RecordCue message.
2013-10-15	PA4	Added new Cue Recording messages for clearing.
2013-11-09	A	Accepted as version A with the release of Capture Polar 2.11.
2014-10-23	PB1	Added new Show Synchronization messages.
2015-01-21	PB2	Polished Show Synchronization messages.
2015-05-07	B	Accepted as version B with the release of Capture Argo 21.0.
2015-10-25	PC1	First prerelease of C draft 1, featuring laser feeds.
2015-11-02	PC2	Changed laser feed frames to be sent over UDP and added data packing.
2015-11-06	C	Accepted as version C with the release of Capture Argo 21.1.20.

1.2 Introduction

The CITP/CAEX "Capture Extensions" layer is a set of networking messages implemented as a private CITP (<http://www.citp-protocol.org>) layer. This document could be interpreted as an addendum to the CITP protocol specification.

3. Live View messages

Capture allows a peer to interact with one of its views in live mode. If no view is in live mode, these features will not be available. If multiple views are in live mode, the first view in live mode will be the one with which the peer can interact.

3.1 CAEX / GetLiveViewStatus message

This message is sent to Capture as a request for a LiveViewStatus reply.

```
CITP_CAEX_GetLiveViewStatus
{
    CITP_CAEX_Header    CITPCAEXHeader    // CITP CAEX header, ContentCode = 0x00000100.
}

```

3.2 CAEX / LiveViewStatus message

This message is sent by Capture in reply to a GetLiveViewStatus message.

```
CITP_CAEX_LiveViewStatus
{
    CITP_CAEX_Header    CITPCAEXHeader    // CITP CAEX header, ContentCode = 0x00000101.
    uint8               Availability      // 0x00 = Not available.
                                     // 0x01 = Alpha view available.
                                     // 0x02 = Beta view available.
                                     // 0x03 = Gamma view available.

    uint16[2]           Size              // The width and height of the view.
    float[3]            CameraPosition    // The XYZ position of the camera.
    float[3]            CameraFocus       // The XYZ focus of the camera.
}

```

Note: The purpose of sending the camera position and focus is so that the peer can use this as default when requesting live images.

3.3 CAEX / GetLiveViewImage message

This message is sent to Capture as a request for a LiveViewImage reply.

```
CITP_CAEX_GetLiveViewImage
{
    CITP_CAEX_Header    CITPCAEXHeader    // CITP CAEX header, ContentCode = 0x00000200.
    uint8               Format             // 0x01 = JPEG
    uint16[2]           Resolution        // The width and height requested.
    float[3]            CameraPosition    // The position of the camera, as XYZ.
    float[3]            CameraFocus       // The focus of the camera, as XYZ.
}

```

Note: If the peer requests a resolution higher than the current size of the view, Capture will return an image with the current size of the view. If no live view is available, Capture will reply with a 'Refused' NACK.

3.4 CAEX / LiveViewImage message

This message is sent by Capture in reply to a GetLiveViewImage message.

```
CITP_CAEX_LiveViewImage
{
    CITP_CAEX_Header    CITPCAEXHeader    // CITP CAEX header, ContentCode = 0x00000201.
    uint8               Format             // 0x01 = JPEG
    uint32              DataSize          // The number of bytes in the following field.
    uint8[DataSize]     Data              // Image data.
}

```

4. Cue Recording messages

Capture allows a peer with cue recording capabilities to expose some amount of remote control of its 'recording unit' / 'programmer'.

4.1 CAEX / SetCueRecordingCapabilities message

This message is sent to Capture in order to enable or disable remote cue recording.

```
CITP_CAEX_SetCueRecordingCapabilities
{
    CITP_CAEX_Header  CITPCAEXHeader    // CITP CAEX header, ContentCode = 0x00010100.
    uint8             Availability        // 0x00 = Not available
                                        // 0x01 = Available
    uint8             OptionCount        // The number of options that follow.
    {
        ucs2           Name              // The name of the option.
        ucs2           Choices           // Tab ('\t') separated list of choices.
        ucs2           Help              // An optional explanation/description.
    }[OptionCount]
}
```

Note: The absence of choices for an option denotes a free text field.

4.2 CAEX / RecordCue message

This message is sent unsolicited by Capture when the user records a cue.

```
CITP_CAEX_RecordCue
{
    CITP_CAEX_Header  CITPCAEXHeader    // CITP CAEX header, ContentCode = 0x00010200.
    uint8             OptionCount        // The number of options that follow.
    {
        ucs2           Name              // The name of the option.
        ucs2           Value            // Value of the option.
    }[OptionCount]
}
```

4.3 CAEX / SetRecorderClearingCapabilities message

This message is sent to Capture in order to enable or disable remote clearing of the recorder.

```
CITP_CAEX_SetRecorderClearingCapabilities
{
    CITP_CAEX_Header  CITPCAEXHeader    // CITP CAEX header, ContentCode = 0x00010300.
    uint8             Availability        // 0x00 = Unsupported (default state)
                                        // 0x01 = Currently unavailable
                                        // 0x02 = Available
}
```

4.4 CAEX / ClearRecorder message

This message is sent unsolicited by Capture when the user wishes to clear the state of the recorder.

```
CITP_CAEX_ClearRecorder
{
    CITP_CAEX_Header  CITPCAEXHeader    // CITP CAEX header, ContentCode = 0x00010400.
}
```



```

uint16      FixtureCount      // Number of fixtures following.
{
  uint32      FixtureIdentifier // Console's fixture identifier.
                                // Set to 0xffffffff if unknown by Capture.
  ucs2      ManufacturerName // The name of the fixture's manufacturer.
  ucs2      FixtureName      // The model name of the fixture.
  ucs2      ModeName         // The name of DMX mode.
  uint16     ChannelCount    // The number of channels of the DMX mode.
  uint8      IsDimmer        // A boolean 0x00 or 0x01 indicating whether it's.
                                // a dimmer (only) fixture or not.
  uint8      IdentifierCount  // The number of following identifier blocks.
  {
    uint8      IdentifierType // 0x00 = RDMDDeviceModelId (uint16)
                                // 0x01 = RDMPersonalityId (uint64)
                                // 0x02 = AtlaBaseFixtureId (guid)
                                // 0x03 = AtlaBaseModeId (guid)
    uint16     IdentifierDataSize // The size of the data following.
    uint8[]    IdentifierData    // Identifier type specific data.
  }[IdentifierCount]
  uint8      Patched         // A boolean 0x00 or 0x01 indicating whether the
                                // the fixture is patched or not.
  uint8      Universe        // The (0-based) universe index.
  uint16     UniverseChannel // The (0-based) DMX channel.
  ucs2      Unit             // The unit number.
  uint16     Channel         // The channel number.
  ucs2      Circuit          // The circuit number.
  ucs2      Note             // Any notes.
  float[3]   Position        // The 3D position.
  float[3]   Angles          // The 3D angles.
} [FixtureCount]
}

```

5.5 CAEX / FixtureModify message

This message is sent unsolicited by both Capture and the peer whenever a fixture has been modified. All fields must always be present, but it is important that the ChangedFields field indicates which have actually been modified.

```

CITP_CAEX_FixtureModify
{
  CITP_CAEX_Header CITPCAEXHeader // CITP CAEX header, ContentCode = 0x00020202.
  uint16      FixtureCount      // The number of fixtures following.
  {
    uint32      FixtureIdentifier // Console's fixture identifier.
    uint8      ChangedFields      // Bitmask indicating which of the following fields have changed.
    uint8      Patched           // As in FixtureList. (ChangedFields & 0x01).
    uint8      Universe          // As in FixtureList. (ChangedFields & 0x01).
    uint16     UniverseChannel    // As in FixtureList. (ChangedFields & 0x01).
    ucs2      Unit               // As in FixtureList. (ChangedFields & 0x02).
    uint16     Channel           // As in FixtureList. (ChangedFields & 0x04).
    ucs2      Circuit            // As in FixtureList. (ChangedFields & 0x08).
    ucs2      Note               // As in FixtureList. (ChangedFields & 0x10).
    float[3]   Position          // As in FixtureList. (ChangedFields & 0x20).
    float[3]   Angles            // As in FixtureList. (ChangedFields & 0x20).
  } [FixtureCount]
}

```

5.6 CAEX / FixtureRemove message

This message is sent unsolicited by both Capture and the peer whenever one or more fixture(s) have been removed.

```

CITP_CAEX_FixtureRemove
{
  CITP_CAEX_Header CITPCAEXHeader // CITP CAEX header, ContentCode = 0x00020203.
  uint16      FixtureCount      // The number of fixture identifiers following.
  uint32[FixtureCount] FixtureIdentifier // Console's fixture identifiers.
}

```

5.7 CAEX / FixtureSelection message

This message is sent unsolicited by both Capture and the peer to inform the other side of a new fixture selection. Note that the order of the fixture identifiers should carry the order in which the fixture(s) were selected.

```

CITP_CAEX_FixtureSelection
{
    CITP_CAEX_Header    CITPCAEXHeader    // CITP CAEX header, ContentCode = 0x00020300.
    uint16              FixtureCount      // The number of fixture identifiers following.
    uint32[FixtureCount] FixtureIdentifier // Console's fixture identifiers.
}

```

5.8 CAEX / FixtureConsoleStatus message

This message is sent unsolicited by the peer to Capture in order to convey "live information" data that can be displayed by Capture.

```

CITP_CAEX_FixtureConsoleStatus
{
    CITP_CAEX_Header    CITPCAEXHeader    // CITP CAEX header, ContentCode = 0x00020400.
    uint16              FixtureCount      // The number of fixtures following.
    {
        uint32          FixtureIdentifier // Console's fixture identifiers.
        uint8           Locked           // The fixture has been locked from manipulation.
        uint8           Clearable        // The fixture has a clearable programmer state.
    }[FixtureCount]
}

```

6. Laser feed messages

A peer may serve laser feeds to Capture. Information to Capture about which feeds are available and information from Capture about which feeds to transmit is sent over the TCP based CITP session. Actual feed frame data is transmitted to the UDP based CITP multicast address.

In order for Capture to be able to correlate the feed frames with the appropriate session, a process instance unique and random "source key" is to be generated by the laser controller.

6.1 CAEX / GetLaserFeedList message

This message is sent by Capture upon connection to determine what laser feeds are available. Receiving this message is an indication of Capture's ability to understand CAEX laser feeds.

```
CITP_CAEX_GetLaserFeedList
{
    CITP_CAEX_Header  CITPCAEXHeader    // CITP CAEX header, ContentCode = 0x00030100.
}
```

6.2 CAEX / LaserFeedList message

This message can be sent to Capture both in response to a GetLaserFeedList message as well as unsolicited if the list of available laser feeds has changed.

```
CITP_CAEX_LaserFeedList
{
    CITP_CAEX_Header  CITPCAEXHeader    // CITP CAEX header, ContentCode = 0x00030101.
    uint32            SourceKey          // The source key used in frame messages.
    uint8             FeedCount          // The number of Laser feed listings that follow.
    {
        ucs2          Name              // The name of the feed.
    }[FeedCount]
}
```

6.3 CAEX / LaserFeedControl message

This message is sent by Capture to indicate whether it wishes a laser feed to be transmitted or not. The frame rate can be seen as an indication of the maximum frame rate meaningful to Capture.

```
CITP_CAEX_LaserFeedControl
{
    CITP_CAEX_Header  CITPCAEXHeader    // CITP CAEX header, ContentCode = 0x00030102.
    uint8             FeedIndex          // The 0-based index of the feed.
    uint8             FrameRate          // The frame rate requested, 0 to disable transmission.
}
```

6.4 CAEX / LaserFeedFrame message

This message is sent unsolicited to Capture, carrying feed frame data.

```
CITP_CAEX_LaserFeedFrame
{
    CITP_CAEX_Header  CITPCAEXHeader    // CITP CAEX header, ContentCode = 0x00030200.
    uint32            SourceKey          // The source key as in the LaserFeedList message.
    uint8             FeedIndex          // The 0-based index of the feed.
    uint32            FrameSequenceNo    // A 0-based sequence number for out of order data detection.
    uint16            PointCount         // The number of points that follow.
    {
        uint8         XLowByte           // The low byte of the x coordinate.
        uint8         YLowByte           // The low byte of the y coordinate.
        uint8         XYHighNibbles      // The high nibbles of the x and y coordinates.
        uint16        Color              // The colour packed as R5 G6 B5.
    }[PointCount]
}
```

Such that:

```
Point.X [0, 4093] = Point.XLowByte + (Point.XYHighNibbles & 0x0f) << 8
Point.Y [0, 4093] = Point.YLowByte + (Point.XYHighNibbles & 0xf0) << 4
Point.R [0, 31] = Point.Color & 0x001f
Point.G [0, 63] = (Point.Color & 0x07e0) >> 5
Point.B [0, 31] = (Point.Color & 0xf800) >> 11
```